

UPDATING ECU'S VIA PC

Date Issued: January 7, 2022

DOWNLOADING THE ECU HEX FILES

1. Go to www.seedmaster.ca.
2. Go to the "Support" tab.
3. Click on "Software Downloads".
4. Under the "ISOBUS DRILL DCM & RCM" heading, click on the latest software package.
5. The software will begin to download to your "Downloads" folder in File Explorer.
6. After the software has downloaded, navigate to the "Downloads" folder in File Explorer.
7. Right click on the Software Package, then click "Extract All".
8. Verify the folder it is extracting to and click "Extract".

INSTALLING THE RAVEN CAN SERVICE TOOL

1. Click on the follow link to download the Raven Service Tool:
https://portal.ravenprecision.com/ProductDocumentation/Download?attachmentId=1225&attachmentType=3&modifiedFileName=2587_Raven%20Service%20Tool-Production%20Release.zip&fileNameWithExtension=Raven%20Service%20Tool-Production%20Release.zip&contentType=application%2Fzip-compressed
2. After the software has downloaded, right-click on the Raven Service Tool-Production Release, then click "Extract All".
3. Verify the folder it is extracting to and click "Extract".
4. Open the unzipped "Raven Service Tool-Production Release" folder, then open the "Install" folder.
5. Inside the "Install" folder, double-click on the "setup" file. Follow the installation steps.
6. After the installation is complete, open the "CAN to USB driver Installation Files" folder, then the "USB-CANmodul_SO-387_V6.04r1" folder.
7. Double-click the "SO-387" file to install the CAN drivers.
8. After installation is complete, reboot the PC.

INSTALLING THE ECU SOFTWARE

1. Connect Raven CAN tool to PC and ECU CANBUS.
2. Open the Raven Service Tool program.
3. Choose "Browse".
4. Navigate to the .hex file in your applicable unzipped software folder, select it, and choose "Open".
5. Select "Connect". The ECU being updated will highlight in a light blue color.
6. Right-click the highlighted line.
7. Select "Program". The update progress bar is displayed at on the bottom of the screen.
8. When done, select "Exit".