

UPDATING ECU'S VIA THE VIPER 4+

Date Issued: January 7, 2022

DOWNLOADING THE ECU HEX FILES

- 1. Go to www.seedmaster.ca.
- 2. Go to the "Support" tab then click on "Software Downloads".
- 3. Under the "ISOBUS DRILL ECU & RCM" heading click on the latest software package.
- 4. The software will begin to download to your "Downloads" folder in File Explorer.
- 5. After the software has download navigate to the "Downloads" folder in File Explorer.
- 6. Right click on the Software Package then click "Extract All".
- 7. Verify the folder it is extracting to and click "Extract".
- 8. Insert a USB drive.
- 9. Open the unzipped folder and navigate to the .hex file for the ECU that is being updated.
- 10. Right Click and copy the .hex file.
- 11. On the root directory of the USB drive, right click and paste the .hex file.
- 12. Repeat steps 8 to 11 if you are updating multiple ECUs.
- 13. Once the .hex files are copied, safely remove the USB drive.

COPYING THE HEX FILE TO THE VIPER 4+

- 1. Plug the USB drive with the .hex files on it into the Viper 4+.
- 2. On the Viper 4+, touch "Administrator".
- 3. Touch "File Manager".
- 4. Touch the tab the looks like a USB Drive.
- 5. Touch the drop-down menu to the right of "USB" and choose the USB drive that was just inserted.
- 6. Touch the drop-down menu to the right of "Choose file type".
- 7. Scroll down to "Node Update" and select it.
- 8. Touch the blue right arrow.
- 9. If the file(s) were copied successfully to the USB, they will be listed on the bottom of the screen.
- 10. Place check marks beside the .hex files to be copied to the Viper 4+.
- 11. Touch the button that has the two grey pieces of paper with the arrow.
- 12. An import screen will pop up. Touch the green check mark to confirm the import.
- 13. Touch "OK" after the files are successfully transferred. Then, touch the green back arrow and safely remove the USB drive.

INSTALLING THE NEW ECU FIRMWARE

- 1. Touch the "System Manager" button.
- 2. Touch the tab that shows a blue computer screen.
- 3. Select the ECU that is being updated to highlight it blue.
- 4. Touch the drop-down menu below "Versions Available", then choose the latest version.
- 5. Touch the green down arrow to apply the update.
- 6. Wait for the software to install. After the install has completed, repeat as necessary.